
Detection coverage

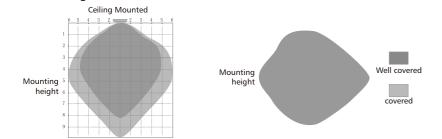

Application(Function Demo-On/off control)






With sufficient daylight, even when motion detected, light remains OFF.

With insufficient daylight, when motion detected, light ON.

otion After the last detection and the present hold time elapsed, light OFF.

ED CEILING LIGHT USER GUIDE

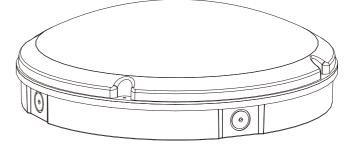

LED CEILING LIGHT USER GUIDE

LED CEILING LIGHT USER GUIDE

Safety Instructions

To ensure correct function and safety, please read and follow all instructions carefully before using the product

- 1. Turn off power supply before installation or before doing any maintenance work
- 2. Do not install any luminaire near the heat source
- 3. P grade please refer to product label, only IP65 can be used in damp locations
- 4. Do not exceed the nominal supply voltage or amperage ratings
- 5. Dimmable version could be compatible with a wide range of recommended TRiAc dimmers
- 6. All wiring and installation of the light fitting must adhere to local and national wiring rules
- 7. Take care not to pull any electrical wires during unpacking as this may damage the connection
- 8. Lay out all the components on a smooth surface and make sure there are no components missing before assembling
- 9. To avoid injury or damage to the fitting please ensure that power leads and screws are secure before connecting the power
- 10. Please keep instructions for future reference

3. Professional electrician for installation and maintenance only.


Installation Procedure

WARNING M


- 1.Switch off before installation.
- 2.Switch on only after complete installation and examination of the circuit. Turn Off Power Supply

Turn Off power supply before starting any installation Read instructions & check you have all the tools & accessories to complete the installation correctly.

Wall mounted installation select preferred colour temperature for product in CCT change function only Notice the direction 00 0 Open the mounting holes Cut gap when lamp splicing or surface mounting \odot Lamp splicing nicture

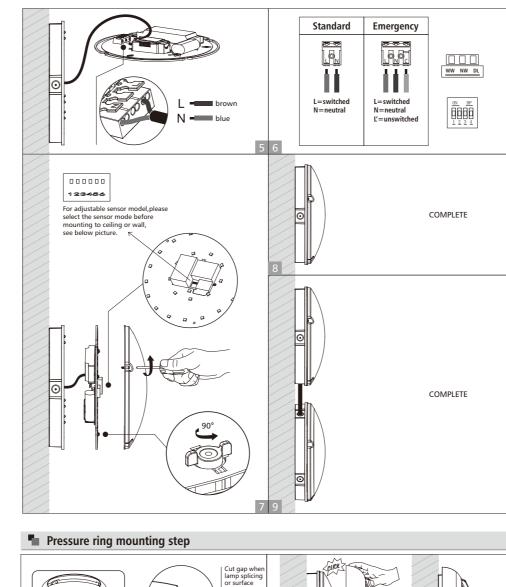

Wiring Diagram

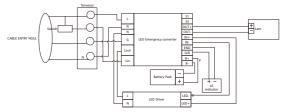

Instructions for automatic test option

 Every month: Perform a 3minute duration test. · Every year: Perform a 1 Hour or 3 Hours duration test.

All test functions are factory preset and do not need field adjustment.


2. Dual Colour Indicator LED Status Meanings Green Solid On Ready/Normal Operation

Red Requires Service

•	One flash, 4 second pause Battery not connected	
••	Two flashs, 4 second pause	Battery short or low battery voltage
•••	Three flashs, 4 second pause	Charger board fault
• • • •	Four flashs, 4 second pause	Transformer fault
••••	Five flashs, 4 second pause	LED lamp fault

Detection area					
S	1		100%	Dete dete	
IF	٩L	0	50%	can l	
				com	
	"			swith appl	

COMPLETE

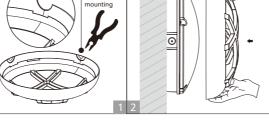

Functions Instruction(For specific function, please refer to actual model

Emergency

Emergency function switches automatically between power cut and power restoration Li battery, high efficiency Battery duration:3 hours Charge period: 24 hours



Sensor


Detection area: 140 degree wide detective beam angle with 2-10 meters distance

Cable connection

Mark	Description	Building wiring cable
L	Switched Active	Switch cable
Ľ	Unswitched Active	Unswitch cable
	Earth	Earth cable
N	Neutral	Neutral cable


1.Once the unit is powered up it will automaticlly initiate a self test and diagnostics as follows:

• Every 4 seconds: Check for battery disconnection, charger board fault, lamp failure and transformer failure.

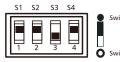

Switch DOWN

ection area means ection coverage. If be adjusted by nbining DIP swithches for specific application.

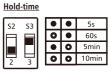

Hold-time means the time period the light will be ON after the last detection.

Daylight threshold



Daylight sensor priors to motion sensor. Set threshold for specific needs. If Disable, only motion sensor works.